



# SG Supply And Service

Blk 637, Veerasamy Road, #02-105, Singapore 200637 Tel : +65 6292 4816  
E-mail: sales@sgsands.com.sg Website: www.sgsands.com.sg


## 30CSW Gemi Auto Instant Refill Hot Drinking Water Dispenser

Dimension : 540mm (width) x 190mm (depth) x 560mm (height)


GEMI GM-K1-30CSW is a point of use (POU), direct pipe in model, instant auto refill hot boiling water dispenser, Counter Top or Wall Hung boiling water dispenser specially designed for premises where large amount of hot water is required frequently.

Complete with 4 stages Korean made Phileo UF filtration system or Crystal Quest double in-line under sink water filtration system, providing clean & refreshing instant boiling hot and ambient room temperature drinking water for big office, large pantry, school, factory, canteen, workers dormitory, recreation club and hospital, 24 hours 7 days a week. Energy saving!

### GM-K1-30CSW

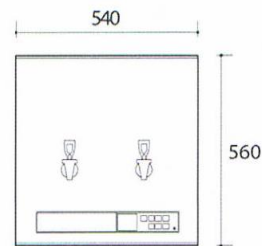

前视图  
Integral front elevation



顶视图  
Integral top view



### Product Features :

#### One Time Of Boiling, Boiled Water Pour Out Only.

Step-water intake and layer by layer heating. Offer 100% pure hot boiled water always and at constant temperature on and on.

- **MCU Control System With LCD Display.**

Adopts MCU Control to set pre-set the heater operating hours for the day each day, and which days for the week. Sleep mode when you don't need the hot water, saves energy, less power usage and thus prolongs the heater's service lifespan greatly.

- **Quintuple Protection Technology And Automatic Alarming.**

When abnormal occasion occur, example electric leakage, dry heating, inflame, lid opening and steam, automatically alarm to alert the user, and the heater will switch to safety mode itself, it will shout down the main power, indicates breakdown cause and buzzing alarms to guarantee safety.

- **Ultra-Thin Dimension, A Great Leap In Design**

The thickness of the dispenser is only 190mm (less than 8 inch). The advanced step-water pour-in techniques and the layer by layer heating method successfully solve the problems of mixing boiled water with un boiled water in traditional single tank heater. It a big step forward in water heater innovation.

- **Heating Tube Self-Descaling Technique**

Adopts bottom and damping inflow designation, water scale are precipitate at the bottom. Therefore ensure dispense off boiled water is always clean and pure.



# SG Supply And Service

Blk 637, Veerasamy Road, #02-105, Singapore 200637 Tel : +65 6292 4816  
E-mail: sales@sgsands.com.sg Website: www.sgsands.com.sg

## • Product Specification :

- Product Model: GEMI GM-K1-30CSW
- Capacity: 30L (7.90 gallon)
- Temperature: 40C – 99C adjustable
- Body Casing: Brunched Stainless Steel
- Control/Display: LCD Programming Setting
- Power Input: 220V /50-60HZ
- Faucets Type: Anti-Scaled Faucet
- 2 Dispensing Outlet: Hot and Ambient (room temperature)
- 24/7 Setting: 24 hours 7 days setting.
- Temporary Function: One touch button for temporary usage (30/60/120 minutes)
- Battery inside, no need to set and reset 24/7 program setting, when power off.
- Dimension : 540mm (width) x 190mm (depth) x 560mm (height)





# SG Supply And Service

Blk 637, Veerasamy Road, #02-105, Singapore 200637 Tel : +65 6292 4816  
E-mail: sales@sgsands.com.sg Website: www.sgsands.com.sg





# SG Supply And Service

Blk 637, Veerasamy Road, #02-105, Singapore 200637 Tel : +65 6292 4816  
E-mail: sales@sgsands.com.sg Website: www.sgsands.com.sg

